
WORKTOP CUTTING INSTRUCTIONS . . pages 2-10 SITE INSTALLATION INSTRUCTIONS . . pages 11-12



The S-Box[™] Chameleon Models are specifically designed for installation at exactly -20mm <u>below</u> surface - for an invisible and camouflaged location in the Counter.

This enables pop-up sockets to remain hidden from view until they are required!

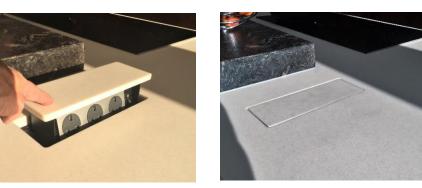

All S-Box[™] Chameleon units drop into position from above. No fixings required. They are SOLID STEEL ENGINEERING.


This method involves:

- The installation of the main structure at exactly 20mm below the Counter-top on a rebate, so that the product can then receive its custom top – one that is therefore flush with, and matching with, its surroundings.
- 2. The creation of a Custom Top (**12mm** <u>maximum</u>) to place on the unit itself.

In worktop materials of **30mm** thickness and above, the installation is achieved by sitting the unit's collar on a **true rebate** cut **within** the material itself.

For materials of **20mm or 12mm** thickness, installation is achieved by sitting the unit's collar on a "<u>false" rebate</u>. This is created by using a second/slave material immediately below.

SEE THRU-VIEWS and EXAMPLES BELOW (NB. REBATE IS ALWAYS 20mm)

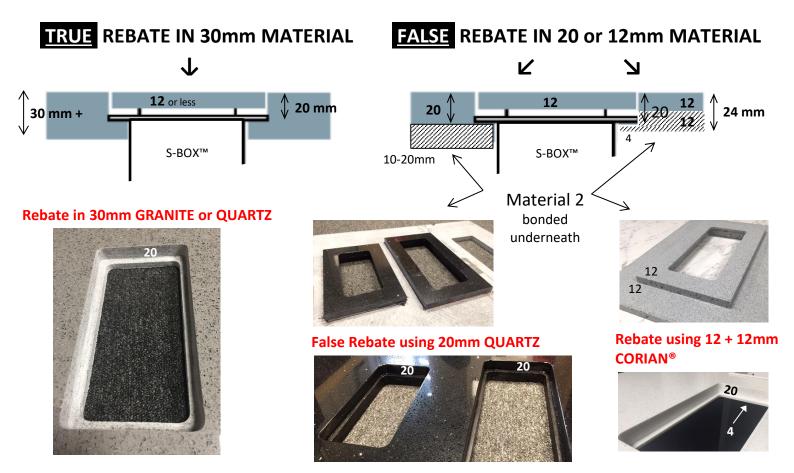

SO ANY S-BOX[™] THAT IS TO BE INSTALLED IN THE HIDDEN "CHAMELEON" MODE, NEEDS THE INVOLVEMENT OF THE WORKTOP FABRICATOR AND HIS CUTTING TOOLS . . .












IN MATERIAL SUCH AS TIMBER, THIS CAN BE DONE BY HAND-TOOLS, BUT IN STONE MATERIAL (such as GRANITE/QUARTZ) AND IN MOST COMPOSITE MATERIALS, ALL PROCESSES ARE CARRIED OUT IN-FACTORY.

THIS IS THE SAME WAY THAT ANY STONE COUNTER IS PRE-CUT FOR THE SINK, THE TAPS, EXTRACTOR OR COOKER HOB.



THE CUTTING TOOLS (*TYPICALLY CROSS-CUTTER* and CNC ROUTER) ARE PROGRAMMED WITH THE DIMENSIONS REQUIRED.

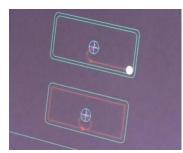


NB. A ROUTER STARTS ITS CUTTING ROUTE FROM

CUTTING ROUTE FROM THE <u>CENTRE POINT</u> WHEN IT MACHINES OUT ANY HOLE.


In 20mm material (or less) the hole will only be a full thru-cut one, with the rebate added later by using a <u>second</u> material underneath)


In the case of 30+mm material, machining will also include making the rebate for an S-Box[™].

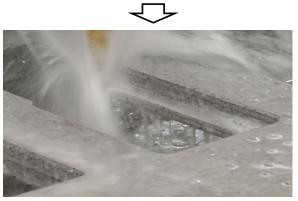


TO CREATE THE REBATE IN 30mm MATERIAL – THE ROUTER CARRIES OUT <u>*TWO*</u> PROCESSES: THE FIRST IS A FULL THRU-CUT HOLE. THE SECOND IS TO GRIND OUT AN EXTRA 8mm, AT 20mm DEPTH.


THE CUSTOM TOP DIMENSIONS ARE 3mm SMALLER, TO PRODUCE A 1.5MM GAP TO ALL 4 SIDES. *(see 'custom top' process on page 10)*

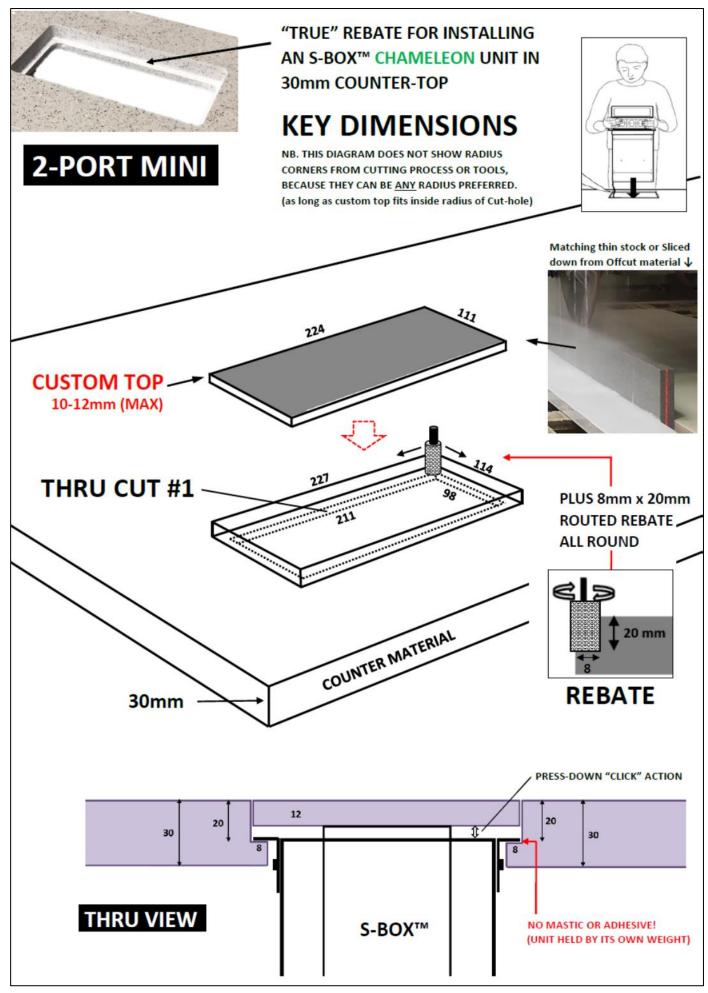


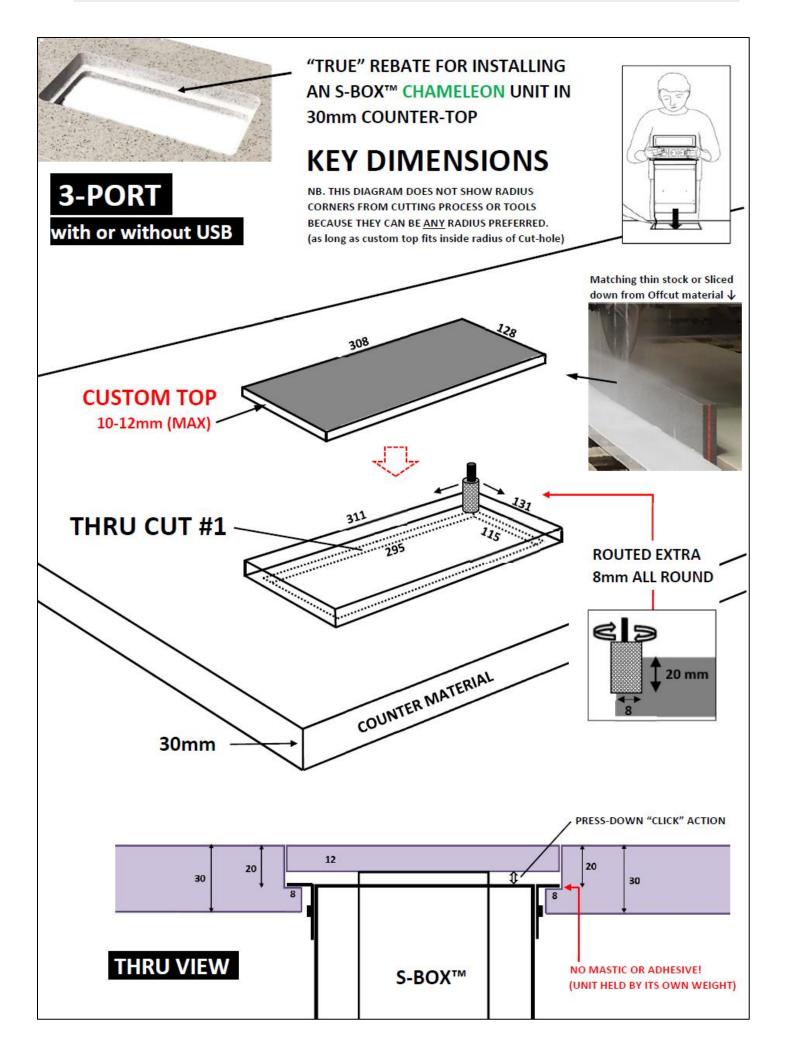


CREATING THE REBATE WITH 20mm MATERIAL REQUIRES THE USE OF A SECOND/'SLAVE" PLATE. THE DIFFERENCE BETWEEN THE UPPER HOLE DIMS, AND THOSE OF THE SLAVE, <u>CREATES</u> THE REBATE. CUSTOM TOP DIMENSIONS ARE 3mm SMALLER, TO PRODUCE A 1.5MM GAP TO ALL 4 SIDES.

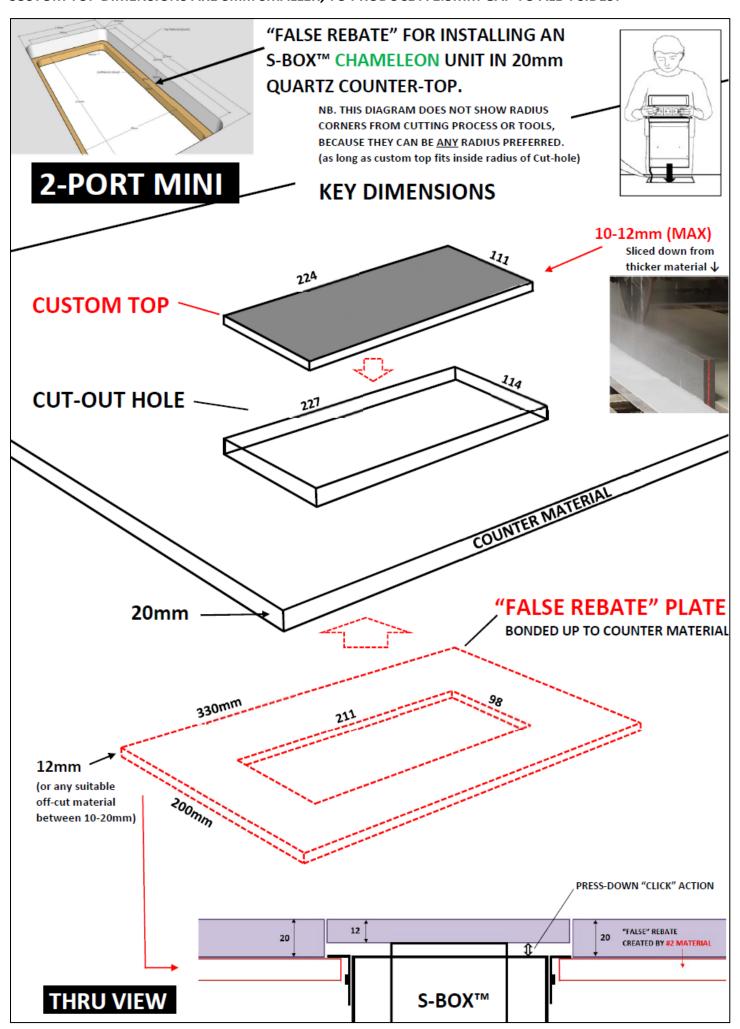


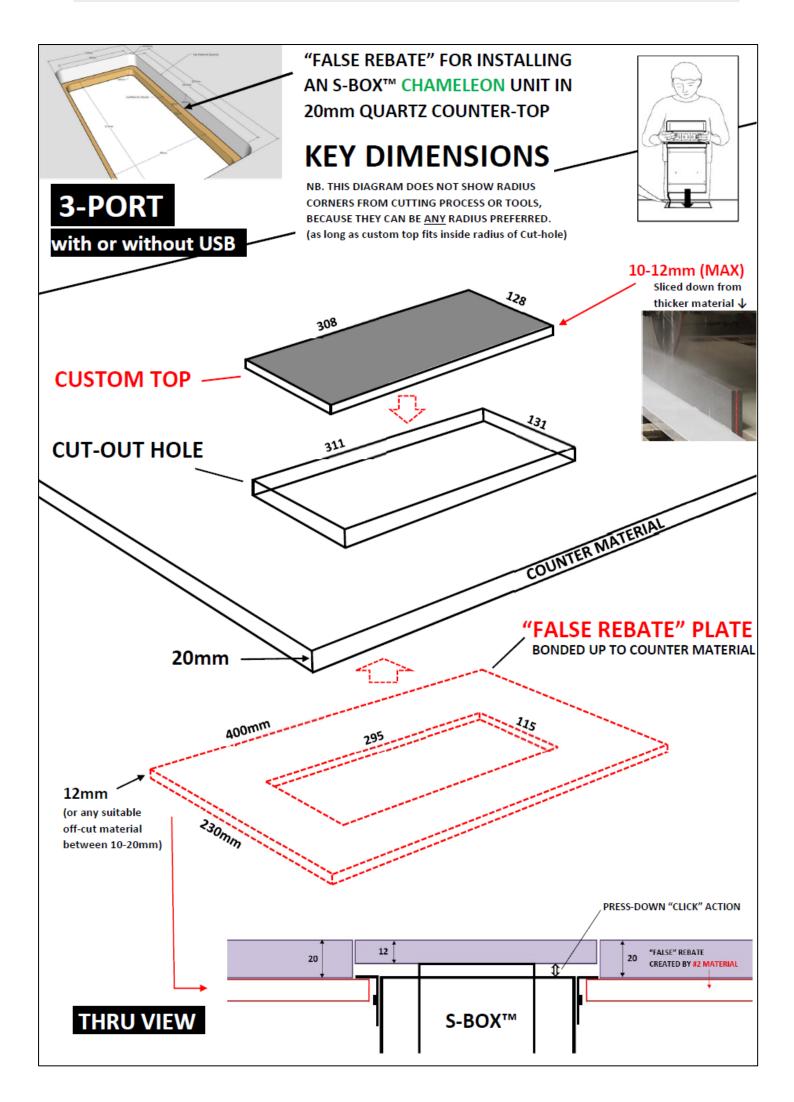

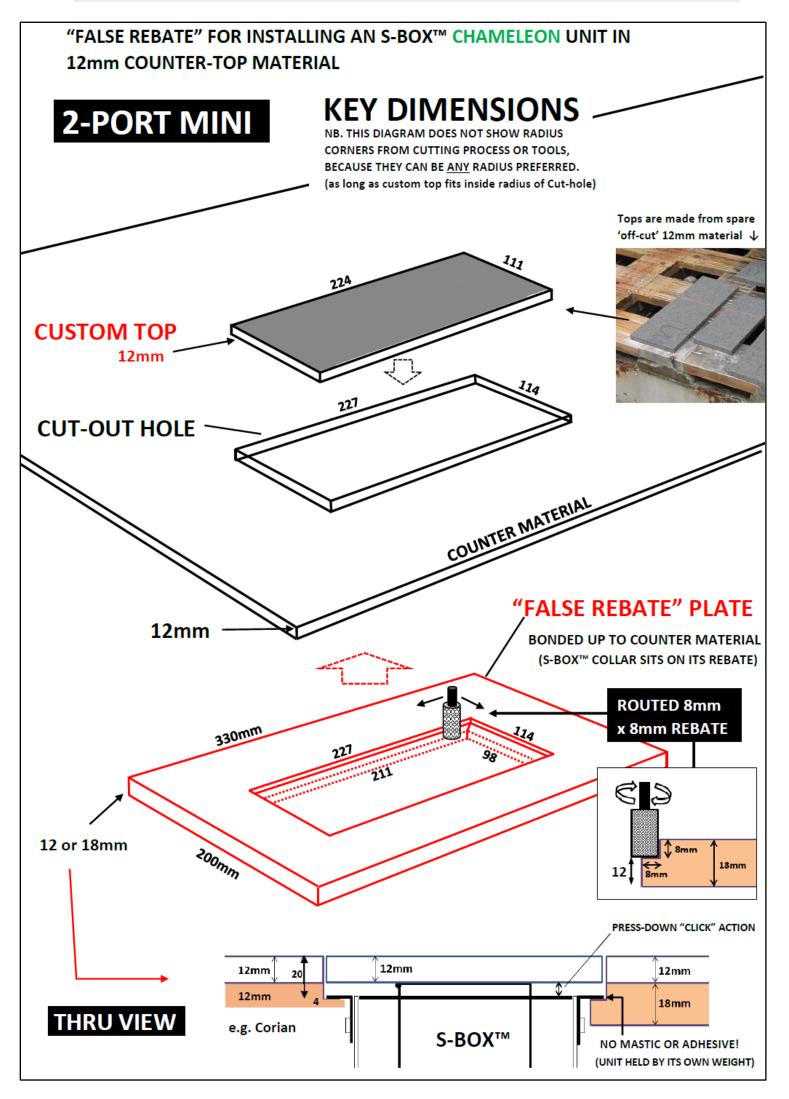


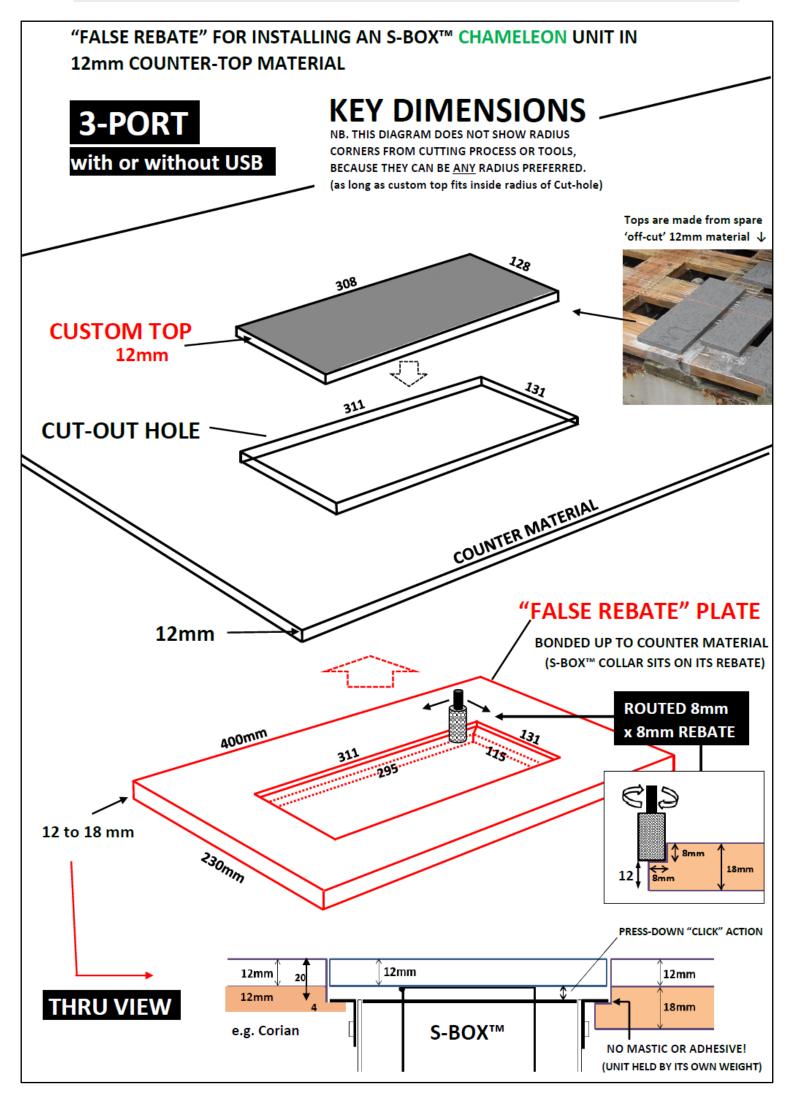

THE CUSTOM TOP

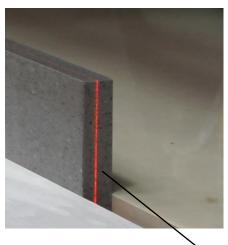

THE 12mm (<u>maximum</u>) S-BOX[™] CUSTOM TOP IS MADE BY 'SLICING' AN OFF-CUT PIECE OF THE COUNTER MATERIAL <u>OR</u> CAN BE MADE FROM 12mm MATCHING STOCK.

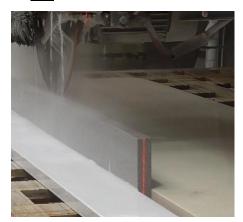



THE CIRCULAR SAW FOLLOWS A LASER LINE, AND CAREFULLY CUTS THE THICK MATERIAL DOWN INTO THE 12mm THICKNESS REQUIRED. THIS IS DONE IN A SERIES OF 8-10 PASSES TO ENSURE THE INTEGRITY OF THE STONE.

CROSS-CUTTING CREATES THE FINAL SIZES READY FOR THEIR CORNERS TO BE ROUNDED



THE CORNERS ARE TYPICALLY ROUNDED BY HAND TO ENSURE THAT THE CUSTOM TOPS WILL NEATLY MARRY WITH THE INTERNAL RADIUS OF THE HOLES. THE EXPERIENCE AND SKILL OF THE WORKTOP SUPPLIER ENSURES THAT EVERYTHING WILL FIT BEAUTIFULLY ON SITE.









WITH 20mm REBATE HOLE AND TOP NOW READY, THE COUNTERTOP CAN GO TO SITE FOR THE S-BOX™ UNIT TO BE INSTALLED! ☺

THE 20mm REBATE

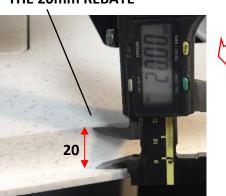

ON SITE CROSS-CHECK THE S-BOXTM COLLAR IS ADJUSTABLE TO



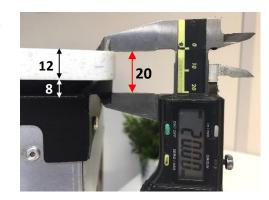

Please set this (if necessary) before installation

ON SITE LIFT-ADJUSTMENT

ALL S-BOX™ UNITS FEATURE A PATENTED & ADJUSTABLE "ZERO-ENERGY" LIFT SYSTEM

This is actually a counterbalance, operating in its own lift-shaft, and which is released to work by way of the catch. Based on the weight of the custom top material, and before the unit is installed into its rebate, this counterbalance will require subtraction or addition of weight for the individual unit to operate correctly.

To do this, place the Custom Top temporarily on top of the box >

Then open the front plate as shown below: \downarrow





You MUST now add the required amount of extra weight into the weight tray, until you are happy with its pace of lift (ahead of the new top being added more permanently later). Refasten the door.



Info:

These fixings are




NB. These Counterweights are SQUARE for 3-PORT and RECTANGULAR for MINI (as above)

A PACK OF COUNTERWEIGHTS HAS BEEN **PROVIDED, SO THAT THE DENSITY OF ANY** 12mm "CUSTOM TOP" MATERIAL CAN BE OFFSET TO ESTABLISH THE UNIT'S SELF-LIFT.

PLEASE ADD WEIGHTS AS FOLLOWS: 12mm CORIAN[®] - Add 0-2 additional weights 12mm QUARTZ - Add 4-8 additional weights 12mm GRANITE - Add 6-10 additional weights

NB. If your Top is lightweight material (such as Timber) there are weight strips that can be <u>removed</u> from the weight tray instead.



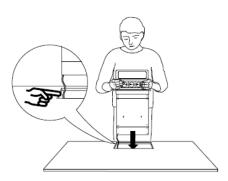

The black collar is perfectly OK on its own, and is deliberately designed to suit nil or very tight radius corners from the cutting process


As an option, specifically for fuller radius corners (8mm+), a Steel drop-in cover plate is provided, to fill in the corner curves of the rebate.





You can now introduce the S-Box[™] unit into its rebated hole.


After ensuring that the Top is clean, dry <u>and free from dust</u>, peel back the tape and place the custom top into position. Press it firmly home. Allow 12hrs for adhesive to bond and cure.

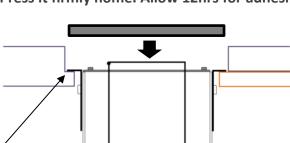

* DO NOT USE ANY MASTIC OR ADHESIVE HERE. UNIT <u>MUST</u> BE REMOVEABLE IF REQUIRED. IT USES ITS OWN WEIGHT FOR STABILITY.



FOR STONE (GRANITE and QUARTZ) MATERIAL PLEASE ADD 3-4 OF SPOTS OF MASTIC FOR EXTRA ADHESION

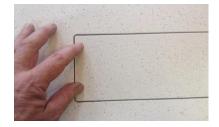

Any final "fine-tuning" of levels, if still required, can be achieved by adjusting the internal catch's male ball position, so that in the closed (*catch-engaged*) position, the Custom Top and the adjacent surface are perfect and level.

By twisting the threaded ball part, and holding the top nut, the position of the ball can be raised or lowered by the tiniest of amounts. This can be found inside the base unit.







THE COMPLETED UNIT SHOULD NOT BE PERMANENTLY FIXED INTO ITS REBATE. ITS OWN WEIGHT WILL KEEP IT IN POSITION. THIS ENSURES THAT IN THE EVENT THAT THE UNIT NEEDS TO BE EXTRACTED FOR ANY REASON IT CAN BE LIFTED OUT THROUGHT THE SURFACE

All S-Box[™] products are complete sealed units with a 2.4m cable for connection to mains power via a junction box. This cable can also receive a <u>simple plug</u> if preferred! All electrical connections should be carried out by a fully Qualified Electrician



S-Box™ is a registered trademark of Cardinal IP Limited The S-Box™ product innovation is protected by Patents - registered to Cardinal IP Limited

Cardinal Innovations Limited Battye Street, Bradford West Yorkshire, ENGLAND BD4 8AG Tel: +44 (0)1274 386820 Email: sales@the-sbox.com Web: www.the-sbox.com